
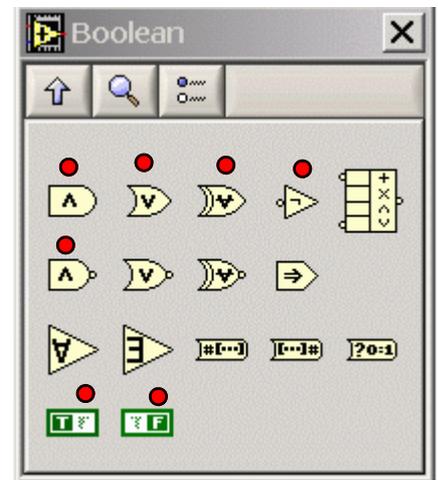
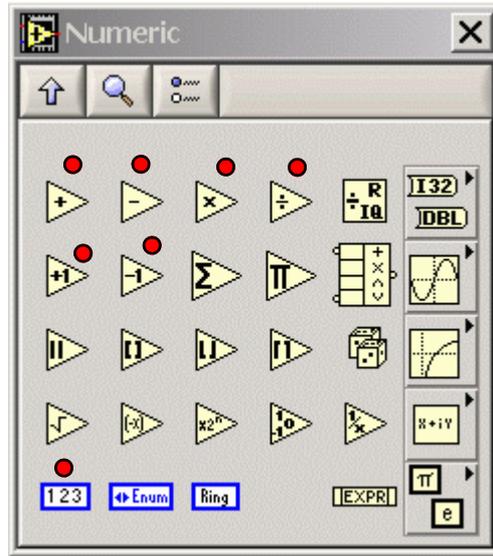


Programming modules of Labview

To programming necessary symbols .



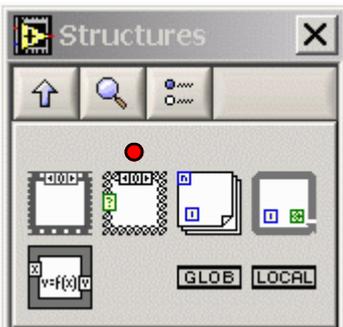


A	B	AND	NAND
0	0	0	1
0	1	0	1
1	0	0	1
1	1	1	0


A	B	OR	NOR
0	0	0	1
0	1	1	0
1	0	1	0
1	1	1	0

A	B	EXOR	NEXOR
0	0	0	1
0	1	1	0
1	0	1	0
1	1	0	1


A	NOT
1	0
0	1

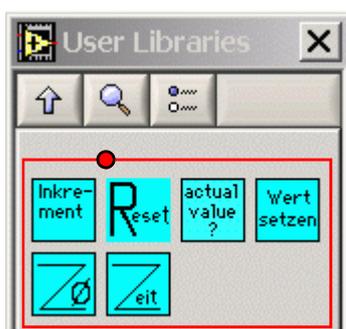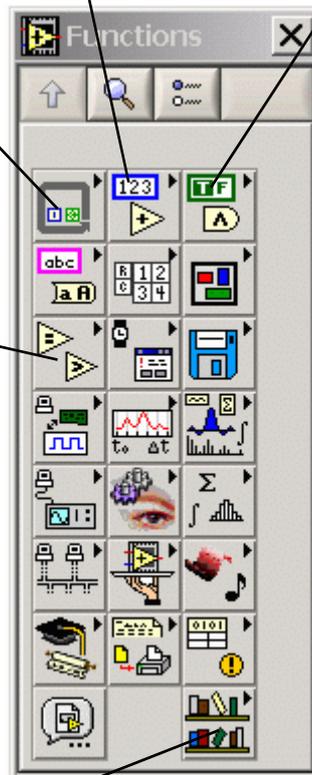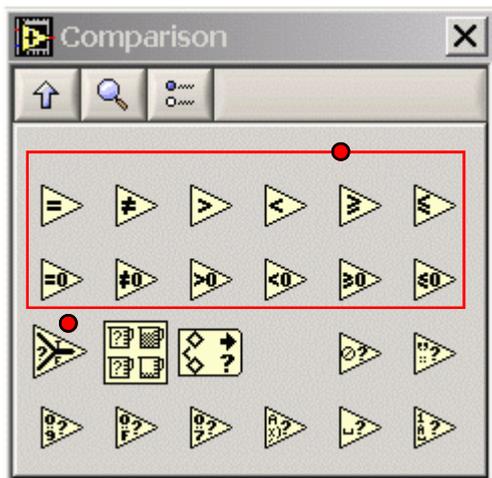

Toolbox in Labview

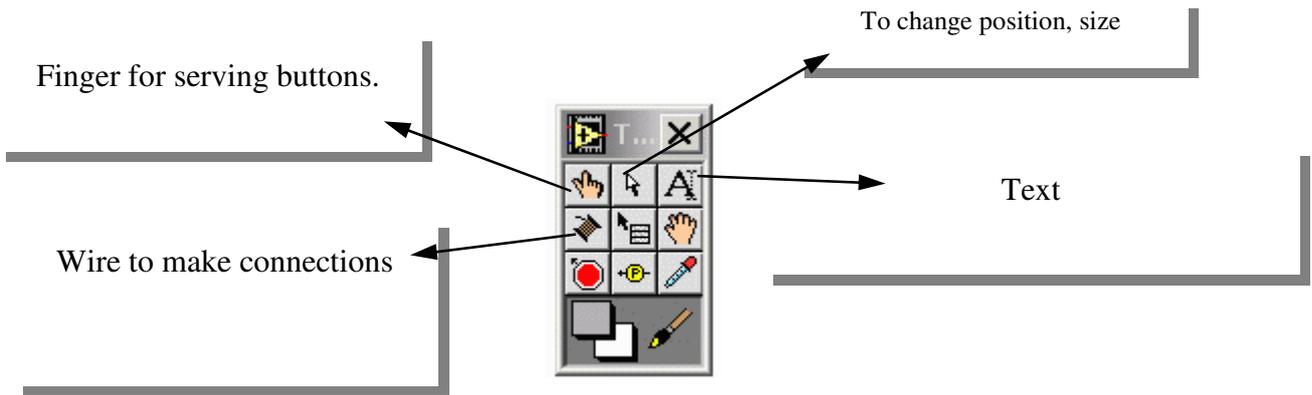

Plant

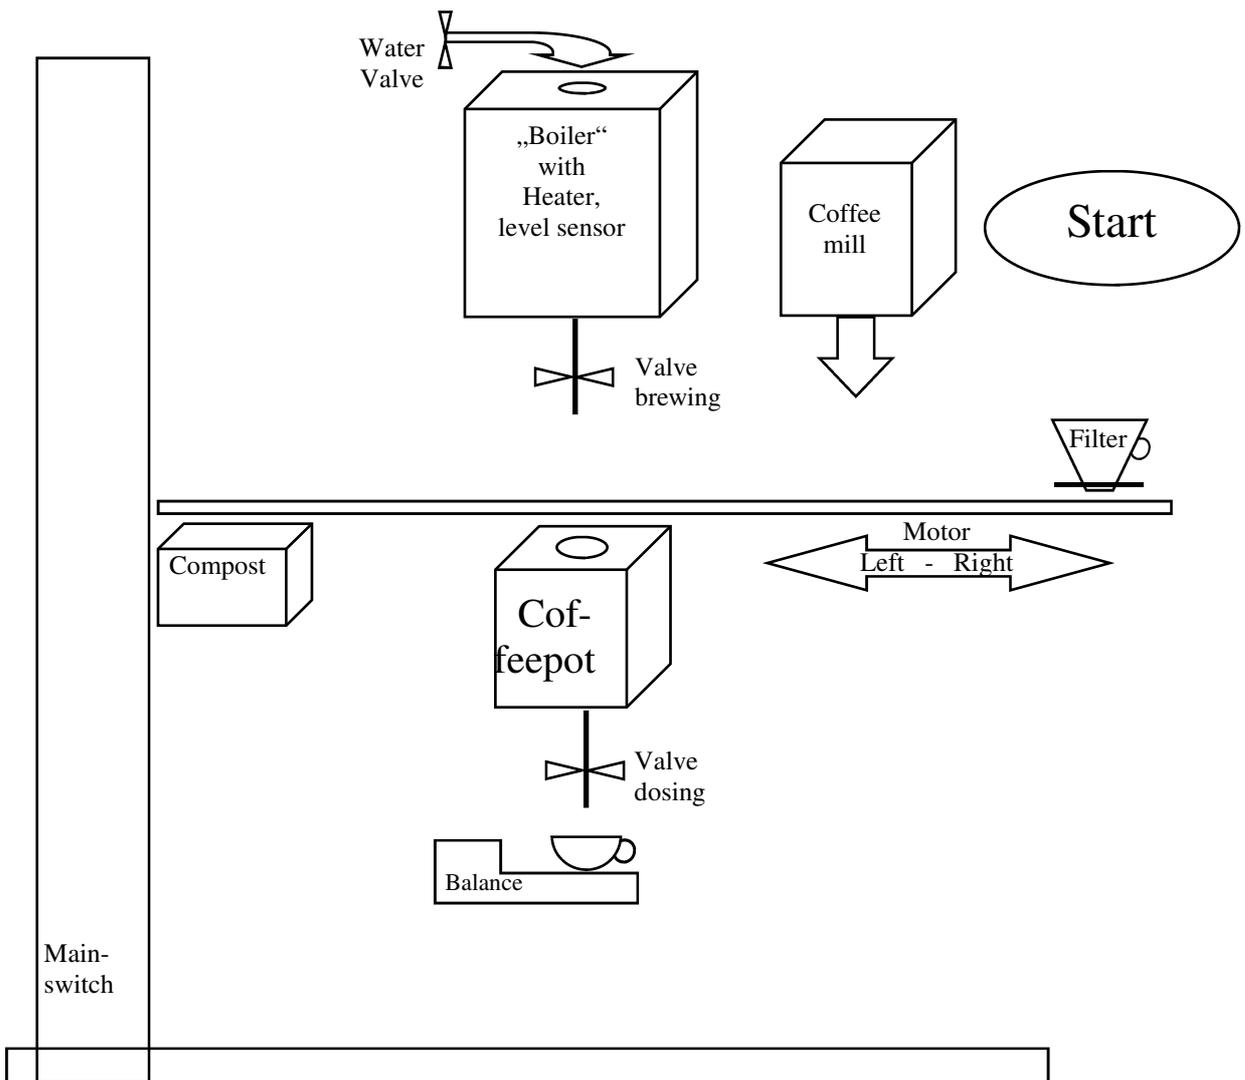

Flow chart

